



AKKO

3084

用户手册

User Manual

 
# Menu

3084 Technical Specifications	10
3084 HotKeys	11
3084 System Commands	12
3084S Single-Color Backlight	13
3084S Custom Backlight	14
Akko Macro V1.0 Macro Setup Instruction 1	15
Akko Macro V1.0 Macro Setup Instruction 2	16
Akko Macro V1.0 Macro Setup Instruction 3	17
Akko Warranty and Service Statement	18

# 3084 Technical Specifications

Dimensions	315 x 126 x 38mm
Weight	Approximately 0.85KG
Country of Origin	China
Type	Mechanical Keyboard
Keycap	PBT Material
Interface	Type-C To USB
Multimedia Keys	YES
N-Key Rollover	YES
Custom Keys	YES (use Akko Marco V1.0)

# 3084 HotKeys

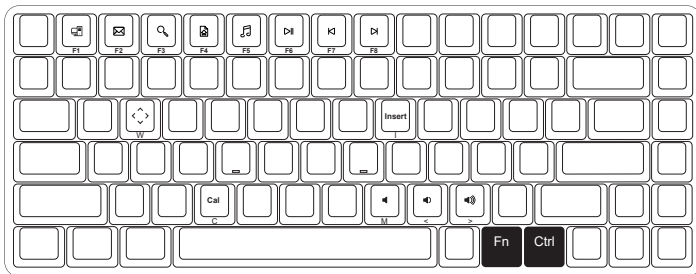


Fn+	F1	=	File Explorer
	F2		E-mail
	F3	=	Windows Search
	F4		Browser Homepage
	F5		Media

Fn+	F6	=	Pause/Playback
	F7		Previous Song
	F8	=	Next Song
	C		Calculator
	I		Insert

Fn+	M		Mute
	<		Decrease Volume
	>	=	Increase Volume
	W		Swap W A S D with ↑ ↓ ← →

Hold down FN and press right Ctrl      Revert Ctrl into Menu (APP) key

# 3084 System Commands

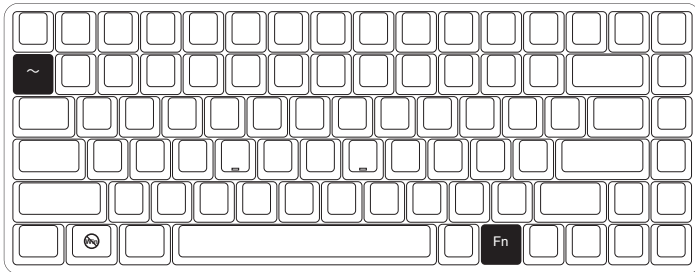 

Lock Windows Key


Press **Fn** and left **Win** key

Restore Factory Settings

Hold down **Fn** and press **~** key

# 3084S Single-Color Backlight

 
\*Backlight function is only available on the backlight version of 3084s.

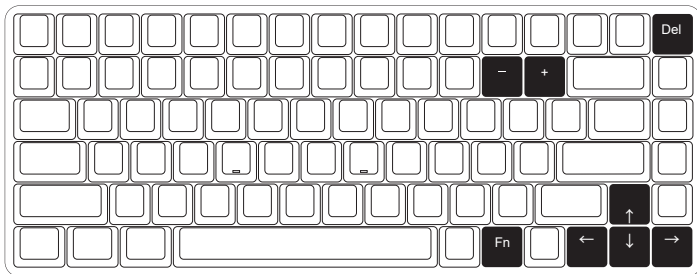

Fn+Del
Lighting effects cycles among Steady / Breathe / One-key / light up / One-key light off / Wave / Ripple / Raindrop

Fn+	“↑”	=	Bright	The adjustments on the left is for generic lighting effects. Some lighting effects cannot be tweaked. For example, effects with constant light can only adjust brightness as they don't have animation speed and direction.
	“↓”		Dim	
	“←”		Set animation direction to left	
	“→”		Set animation direction to right	
	“-”		Slower Animation	
	“+”		Faster Animation	

# 3084S Custom Backlight

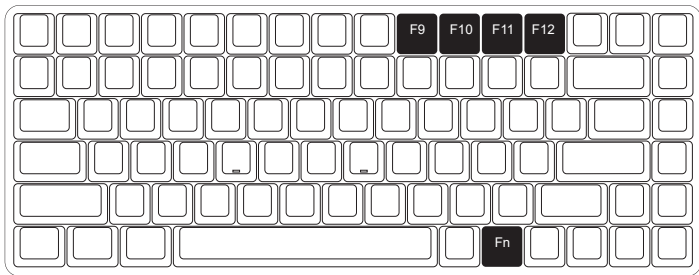 

1. The keyboard provides 4 groups of Fn + (F9 ~ F12) customizable lighting effects.  
The system has 4 groups of default pre-loaded lighting effects that can be triggered.
2. Press Fn + (F9 ~ F12) to trigger custom lighting effects.
3. Edit custom lighting effects:
  - Step 1. Press Fn + (F9 ~ F12) to enter the custom lighting mode.
  - Step 2. Press Fn + (F9 ~ F12) again to start editing. Press to specify the desired illuminated keys for the specific lighting effect group.
  - Step 3. Continue to press Fn + (F9 ~ F12) to save the changes.

# Akko Macro V1.0

 
## Macro Setup Instruction 1

1. Akko Macro V1.0 is hardware-based and works without software-driven.
2. The following keys cannot be programmed: "Esc", "Fn" and "Left Win".
3. Press and hold Fn + Win for 3 seconds to switch to the Macro mode. When the keyboard is re-connected or the system is restarted, the Macro mode will be exited. You need to switch to the Macro mode again to use programmed keys.
4. Akko Macro V1.0 does not support simultaneous trigger, that is, pressing "AB" at the same time will trigger the two keys in the order of A followed by B.
5. Akko Macro V1.0 does not support customized interval time, that is, the trigger interval between key A and key B cannot be defined and will follow the system's default trigger time.



# Akko Macro V1.0

## Macro Setup Instruction 2

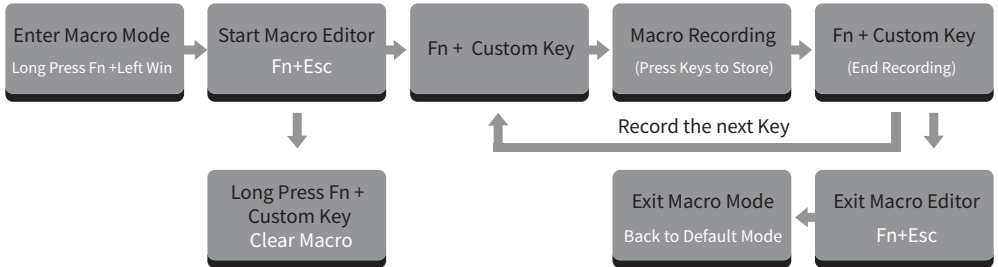

# Akko Macro V1.0

## Macro Setup Instruction 3

### Macro Recording Example: Define “A” as “AKKOGEAR”

Step 1: Press Fn + left Win for 3 seconds to enter the Macro mode.

Step 2: Press Fn + ESC to launch Macro editor.

Step 3: Press Fn + A. This means we choose key “A” to record.

Step 4: Press A, K, K, O, G, E, A, R in order as replacement definition of “A”.

Step 5: Press Fn + A again to end the Macro recording of key “A”.

At this point, pressing “A” in notepad will display “AKKOGEAR”.

If you want to create a Macro for key “B”, press Fn + B to start the Macro recording.

Step 6: Press Fn + Esc to exit Macro editor.

Under the Macro mode, you can configure the keys and Macros you set.

Step 7: Press and hold Fn + Left Win for 3 seconds to exit the Macro mode and return to the default key definition.

# Akko Warranty and Service Statement

1. Akko provides 1-yr warranty for customers in mainland China. For other regions, please contact your seller (Akko distributor) for specific warranty policy.
2. If the warranty window expires, customers need to pay for repairs. Akko will also provide instructions if users prefer to repair the keyboard by themselves. However, users shall take full responsibility for any loss happened during self-repair.
3. Disassembling the keyboard without manufacturer/seller's instruction will immediately void the warranty.
4. The return and warranty policy may vary in different platforms and are subject to the specific distributor at the time of purchase.

## Precautions

Man-made damage is not limited to immersion, falling off, and pulling off the wires with excessive forces, etc.



[www.akkogear.com](http://www.akkogear.com)



扫描关注官方微信



扫描关注官方微博



[instagram.com/akkogear](https://www.instagram.com/akkogear)



[facebook.com/akkogear](https://www.facebook.com/akkogear)